


**Figure 17**

1005-16

Assemble actuating cam into retaining plate and assemble into hub.

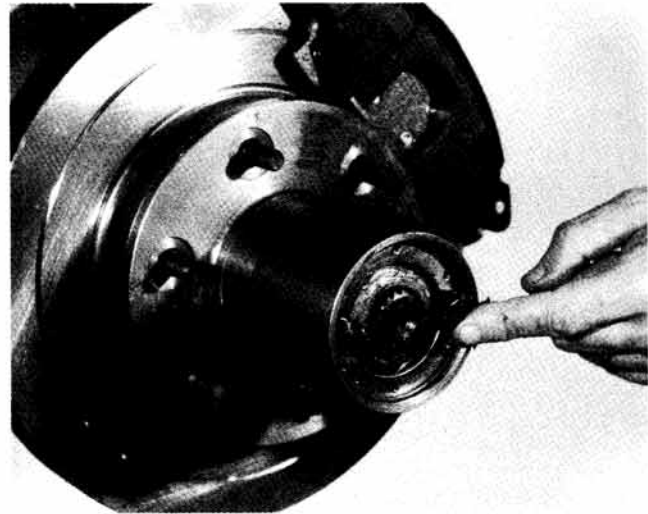

**Figure 19**

1005-18


Apply a small amount of Moly XL hi-speed grease on the ears of the cam.



**Figure 18**

1005-17

Assemble hub snap ring. Be sure snap ring is fully seated in the snap ring groove of the hub.

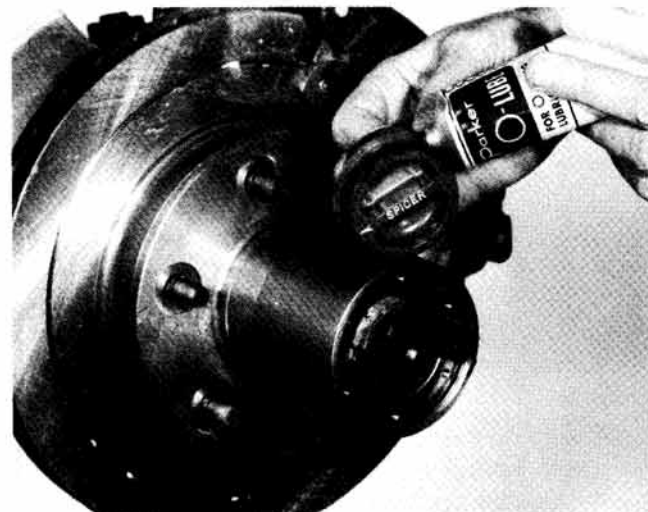

**Figure 20**

1005-19

Apply a small amount of Parker "O" ring lube in groove of actuating knob before assembling outer "O" ring.